

# a·emotional light

ASSEMBLY INSTRUCTIONS · INSTRUCCIONES DE MONTAJE

## Nebra

Designed by Cenlitros

ref. NB04\_120

Suitable for indoor use, at 25°C


Apta para uso interior a temperatura ambiente de 25°C

Box contains | Contenido de la caja:

**A** - Lampshade | Tulipa [1]

**B** - Canopy | Florón [1]

**C** - Piece to clamp | Piezas de sujecion [1]




LED

PHASE CUT

**SAFETY NOTE:** Switch off mains supply before commencing installation

**INDICACIÓN DE SEGURIDAD :** Desconecte la alimentación eléctrica antes de empezar la instalación

## 1

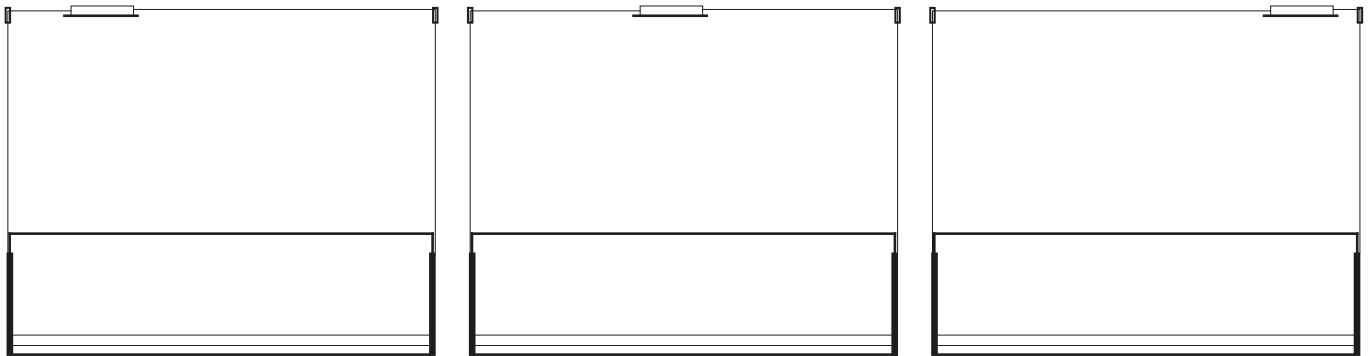


**PLACEMENT OPTIONS:** The lengths of the cables allow you to choose the option that best suits the position where the light point is located.  
What always maintains the position is the separation of the two clamping pieces, they must be placed at a separation of 98.5cm [center-center]

**OPCIONES DE COLOCACION:** Los largos de los cables permiten elegir la opción que mas se ajuste a la posición donde se encuentre el punto de luz.  
Lo que siempre mantiene la posición es la separación de las dos piezas de sujeción, deben colocarse a una separación de 98,5cm [centro-centro]

# a·emotional light

## ASSEMBLY INSTRUCTIONS · INSTRUCCIONES DE MONTAJE

### 2

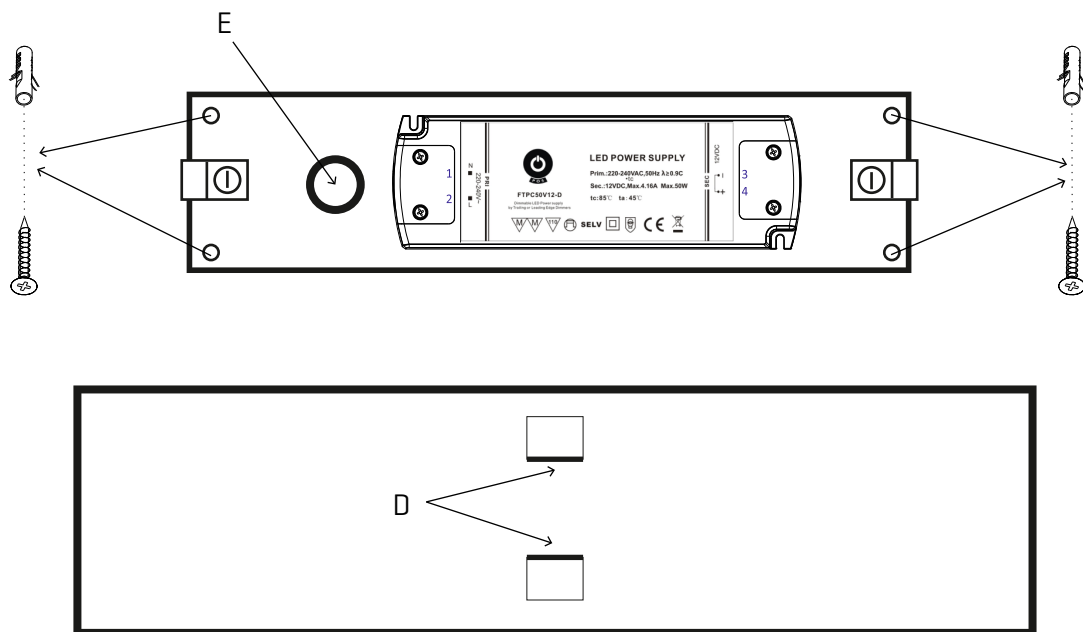

COLOR CODE **1-2**: PHASE [L] - BLACK OR BROWN / NEUTRAL [N] - BLUE  
CÓDIGO DE COLORES **1-2**: FASE [L] - NEGRO O MARRÓN / NEUTRO [N] - AZUL

COLOR CODE **3-4**: POSITIVE [+] - RED / NEGATIVE [-] - BLACK  
CÓDIGO DE COLORES **3-4**: POSITIVO [+] - ROJO / NEGATIVO [-] - NEGRO

The canopy is made up of two pieces.  
To install it, remove the screws located on the sides and separate the cover.  
Drill the 4 holes in the ceiling, fit the wall plugs into them and screw the holding piece.  
Pass the electrical cables inside through part D and make the connection at points 1-2 respecting the color code.

This luminaire includes a phase cut regulation system, in order to obtain a reduction in the luminous flux, make the connection by going through the phase [L] of the regulator and making the connection according to the instructions of the chosen regulator.

The recommended ones are the following:

- HAGER-WBMD400TO**
- CLIPSAL 32E450LM**
- NIKO 310-01900**
- LEGRAND 78401**
- RECOM REDIM07**

El florón se compone de dos piezas, para instalarlo quitar los tornillos situados en los laterales D y separar la tapa.

Realizar los 4 agujeros en el techo, colocar los tacos y atornillar la pieza de sujeción.


Pasar los cables eléctricos al interior por la pieza E y realizar la conexión en los puntos 1-2 respetando el código de colores.

Esta luminaria incluye sistema de regulación por corte de fase, para poder obtener una reducción del flujo luminoso, realice el conexionado pasando por la fase [L] el regulador y realizando la conexión según las instrucciones del regulador escogido.

Los recomendados son los siguientes:

- HAGER-WBMD400TO**
- CLIPSAL 32E450LM**
- NIKO 310-01900**
- LEGRAND 78401**
- RECOM REDIM07**

3

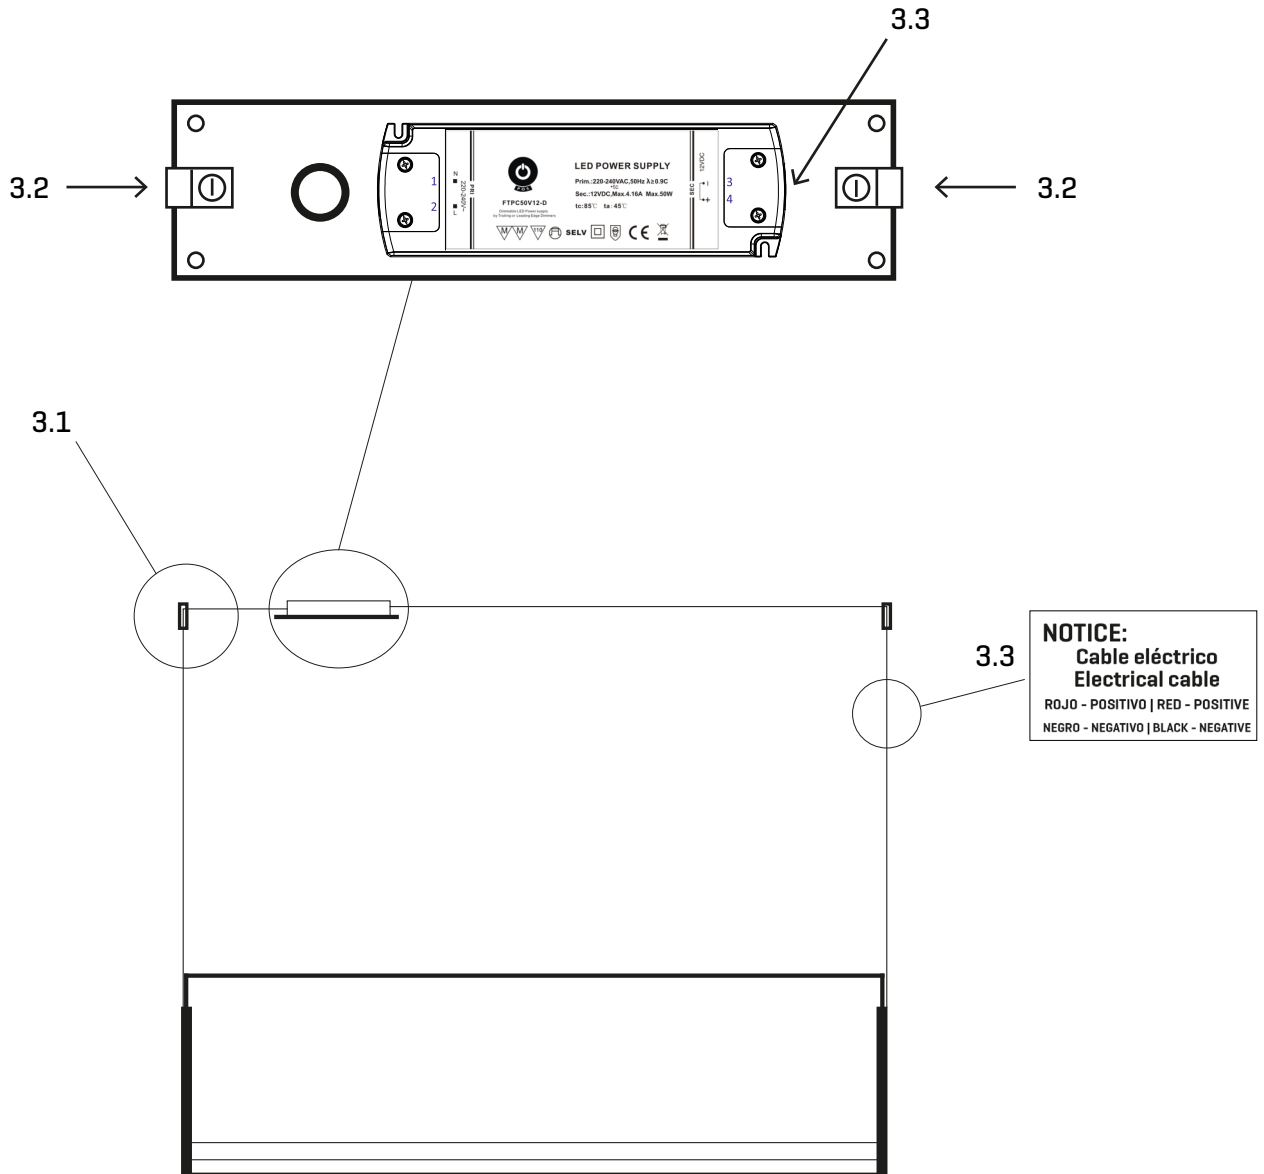

Once you have the canopy and the displacement pieces installed, to proceed with the installation of the luminaire, keep in mind that only the cable marked as such is the one that feeds the luminaire, the other is only for fastening.

Locate this cable and direct it towards the side of the canopy where the + and - connection is located.

3.1 Pass the cable through the displacement piece

3.2 Pass the end of the cable through the canopy anti-pull and tighten the screw

**3.3 Only for cable marked with power label:**

Make the connection in the driver respecting the color code.

Close the canopy with the cover removed in step 1 by re-tightening the two screws.

Una vez tenga el florón y las piezas de desplazamiento instaladas, para proceder a la instalación de la luminaria tenga en cuenta que solamente el cable marcado como tal es por el que se alimenta la luminaria, el otro es solamente de sujeción.

Localice este cable y orientelo hacia el lado del florón donde se encuentra la conexión + y -

3.1 Pase el cable por la pieza de desplazamiento

3.2 Pase el extremo del cable por el antitiron del florón y apriete el tornillo

**3.3 Solamente para cable marcado con etiqueta de alimentación:**

Realice la conexión en el driver respetando el código de colores.

Cierre el florón con la tapa retirada en el paso 1 volviendo a atornillar los dos tornillos.